

Purpose

Technique ASSMPAR sets whether soil moisture states and/or precipitation are to be adjusted by Operation ASSIM.

The Global default is 3.

This Technique is Universal.

Form of Input

ASSMPAR adjust

where adjust is 1, 2 or 3 specifying whether to:

1 = use precipitation only

2 = use soil moisture states only

3 = use both precipitation and soil moisture states in analysis

Example

ASSMPAR 1

An assimilator run will be made optimizing precipitation values only.